

Parts List

#	PART	QTY
1	Base Frame	1
2	Floor Panel (optional)	14
3	Wall panel	2
4	Center partition	1
5	Partition hook	4
6	Partition shelf	2
7	Roof panel	1
8	Door panel	2
9	Door hinge	4
10	#12 self drilling screw	34
11	M6 anti-tamper nut	16
12	M6 anti-tamper nut socket	1
13	#12 thread cutting screw	16
14	3/8" concrete drop-in anchor	4
15	3/8" washer	1
16	3/8" concrete drop-in anchor set tool	1
17	3/8" button head bolt	4

Installation Equipment


7/32 Hex key	Hammer Drill
Concrete drill bit 1/2"	Hammer
#12 Hex driver bit	Level
Drill with socket adapter	Shim for door

Before Installation


- Check local building codes for restrictions
- Use a broom or pressure washer to clean the concrete surface prior to installation.
- For secure installation, ensure there is a minimum radius of solid concrete around each mark.
- The weight of the bike locker is substantial, installation should be completed with no less than two people
- Do not use impact drills during installation process
- If power drills are used, set the clutch to the lowest setting to avoid stripping threads

Instructions


STEP 1

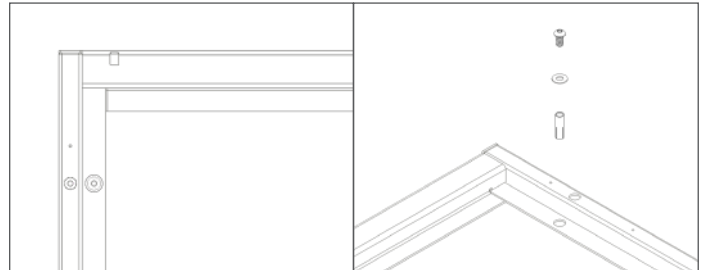

STEP 2

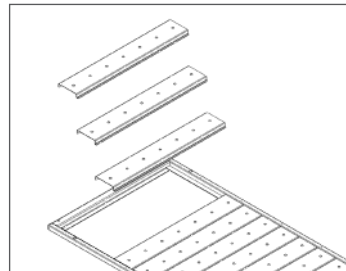

STEP 3

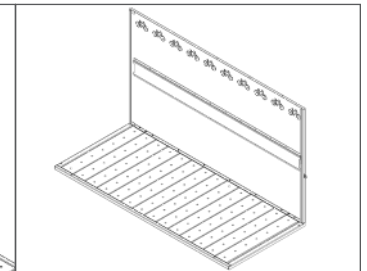


STEP 1: Mark and pre-drill 4 holes for concrete anchors. Holes to be 1/2" diameter and 2" deep. Insert Drop-in anchor and secure with anchor tool and hammer. install the four anchors to secure frame to the floor. Tighten button head bolts and washers to secure frame to anchor.


STEP 2: Insert the slats one at a time to complete the floor installation (optional).

STEP 3: Align the first wall panel with the pre-drilled holes in the frame.


STEP 4

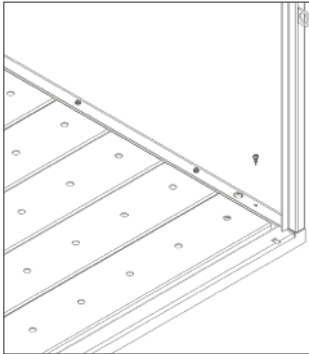


STEP 5

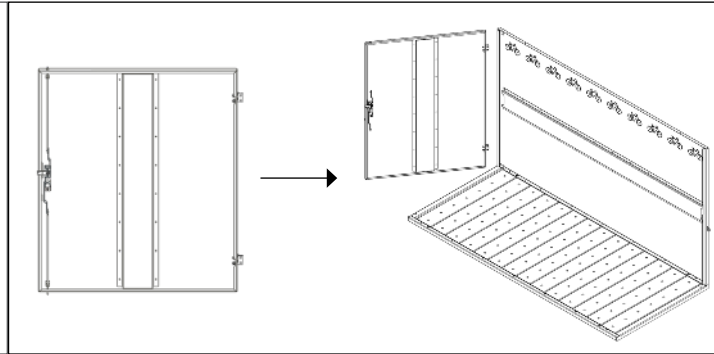


STEP 6

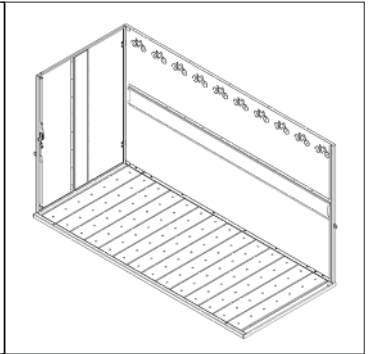


STEP 7

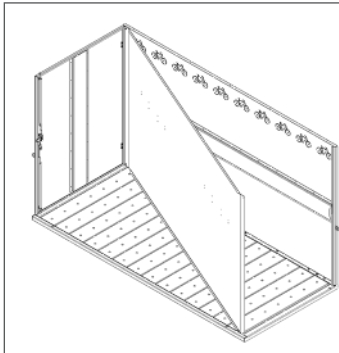


STEP 8

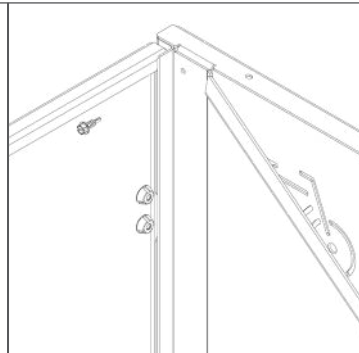


STEP 9

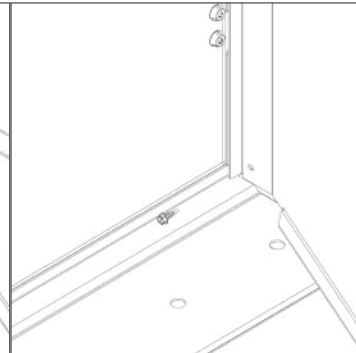


STEP 10

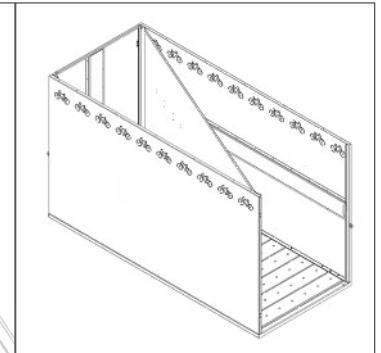


STEP 11

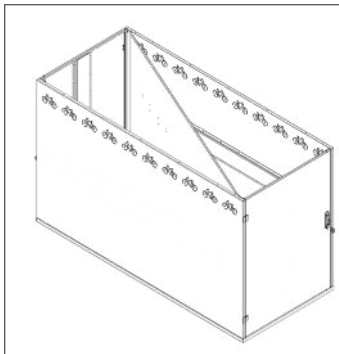


STEP 12

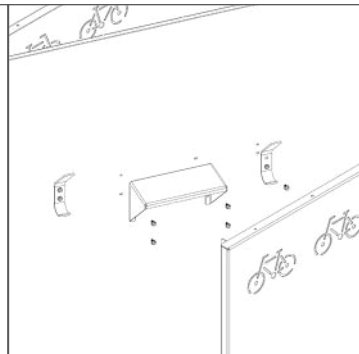

STEP 13

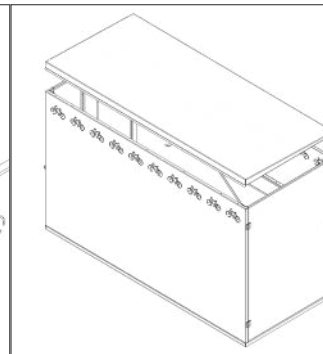

STEP 14

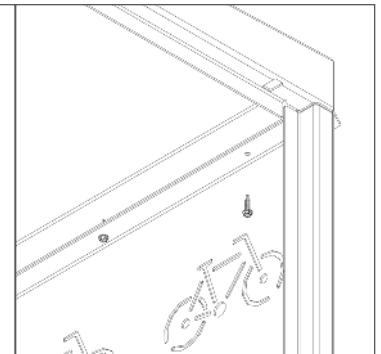

STEP 4: Secure the panel using eight self-drilling screws.

STEP 5: Install hinges on the first door using M6 anti-tamper nuts.

STEP 6: Align door hinges with the wall panel and secure the door using M6 anti-tamper nuts. Insert shim underneath the door to help with alignment during installation.

STEP 7: Align the partition diagonally so that the end sits flush with the wall panel.

STEP 8: Fasten the top of the partition to the wall panel using a self-drilling screw.

STEP 9: Fasten the bottom of the partition to the wall using a self-drilling screw.

STEP 10: Install the second wall panel using eight self-drilling screws.

STEP 11: Follow steps 5-9 to install the second door.

STEP 12: Install the supplied hooks and shelves on both sides of the partition wall using thread cutting screws.

STEP 13: Carefully align the roof panel with the walls and press down to hold in place.

STEP 14: Ensure the holes are aligned and secure the roof using seven self-drilling screws on each side.